

LOCATING AND INSTALLING TAP (15L DRUM)



1. When a new drum arrives the tap is not visible.



2. Unscrew the large cap at the top of the drum to locate the tap under the cap.



3. The tap is removed from the cap by unscrewing in an anticlockwise direction.



4. Replace cap and tighten.



5. Lay the drum over so that the small "bung" below the label faces up.



6. Unscrew the "bung" using the spanner or similar tool by turning anticlockwise.



7. When the "bung" is removed check that there is a hole drilled under the bung.



8. Screw the tap into the "bung" thread.** **Note:** Ensure the tap is turned to the "OFF" position.



9. Return the drum to upright position. Slightly loosen the top cap.



NOTE: Ensure the tap is in the **OFF** position before turning drum upright.



Drum spanners are available on request.