


UV-DIRECT

UV-C system with direct radiation



UV-C DIRECT

UV-C system with direct radiation



UV-DIRECT allows deep air and surface sanitization in any type of environment. Traditional cleaning methods are, often, not sufficient to ensure high levels of hygiene, which can be achieved only by the use of UV-C technology.

As a matter of fact, in the health and pharmaceutical sector, all the environments need to be disinfected to keep hygiene standards high. With UV-DIRECT, it is possible to perform a deeper sanitization of all the rooms, in a simple, immediate and safe way, without developing heat, without using liquids and without any contraindications or resistance.

UV-DIRECT is equipped with a UV-C lamp, and it applies as a common ceiling fixture. The device can be switched on during work breaks, always when the staff is not present, so it radiates surfaces, which are then sanitized. In environments, the natural recirculation of the currents also allows air treatment, which, purified by the microbial load, creates a perfect and healthy environment.

It is shown that the control and the increase of hygiene level allows a consequent and general increase in quality both in healthcare facilities but also in pharmaceutical sector, in microbiological laboratories, etc.

The sanitization level with UV-DIRECT achieves the elimination (99%) of bacteria such as *Bacillus*, *Coli*, *Clostridium*, *Legionella*, *Vibrio*, *Salmonella*, *Pseudomonas*, *Staphylococcus*, etc. in just a few minutes of operation.

High disinfection levels of UV-DIRECT can be otherwise achieved, but only with chemicals, hazardous to health and harmful to the environment, as well as costly.

WHAT ARE UV-C RAYS?

Light in a broad sense can be divided in visible, infra-red and ultraviolet rays.

Ultra-violet rays (invisible) can be classified in:

- UV - A (with tanning properties)
- UV - B (with therapeutic properties)
- UV - C (with germicidal properties)

The germicidal effects of the UV-C radiation destroy DNA of Bacteria, Viruses, Spores, Fungi, Moulds and Mites avoiding their growth and proliferation.

UVGI technology is a physic disinfection method with a great cost/benefits ratio, it's ecological, and, unlike chemicals, it works against every microorganisms without creating any resistance.




Application in an industrial environment



TECHNICAL FEATURES

- Light Progress UV-C selective lamp (emission peak 253.7 nm.) with high output, ozone free, very pure quartz.
- Structure in AISI 304 stainless steel.
- All materials are tested to resist to intense UV-C rays.
- Power supply with electronic ballast specific for Light Progress UV-C lamps
- AISI 304 stainless steel grid to protect the UV-C bulb.
- Ability to handle ON-OFF cycles in an automatic and programmable manner (by adding an optional control panel)
- CE marking (LVD - EMC - MD - RoHS).

UV - DIRECT perfect hygiene level

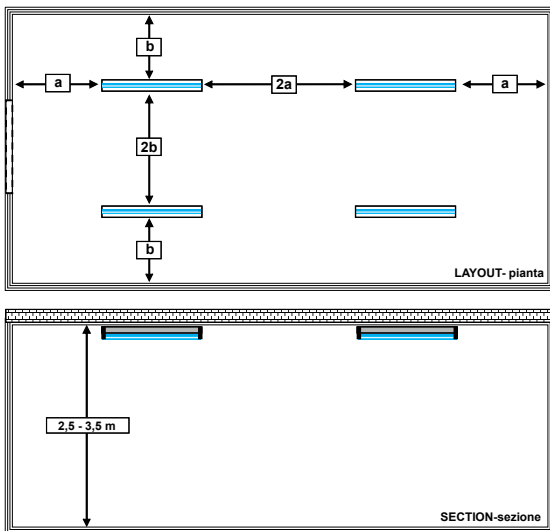

Arrangement layout

UV-DIRECT series with direct radiation includes different models of ceiling lamps, according to the UV-C lamp powers and IP protection degree 55, with or without grounding.

UV-DIRECT has a stainless steel structure and is equipped with a power cord 2.5 m long, without plug.

UV-DIRECT can be equipped with special control board for operational control, which, especially in the case of installation of several units, can handle switching on and off, input security check in the room treated, failure alarm and hour-counter.

UV-DIRECT is ready to use and does not require any special maintenance, except for the periodical replacement of the lamps. UV-DIRECT is entirely manufactured in Italy, with high quality and extremely resistant materials.

