



"I've used Athlegen products for five star properties like W Hotels (Seoul), Raffles International in global locations, and at Zen Day Spa (Sydney) to name a few. Athlegen is consultative in their approach, deliver on time, and service their clients for years thereafter."

**DEBORAH MANGUM-COPELLI**  
SPA DESIGN DEVELOPMENT CONSULTANT  
COGUM ENTERPRISES

## Pro-Lift: Beauty S

Featuring table sections with lift-assist gas springs, this versatile and sturdy table effortlessly converts from a luxurious treatment couch to a completely flat table. Ideal for massage, waxing, electrolysis, manicures, relaxation and specialised beauty treatments.

SELECT FROM OVER 30 COLOURS AND FABRIC CHOICES INCLUDING POLYURETHANE (PU), VINYL (PVC) AND GENUINE ITALIAN LEATHER:





**LIFT-ASSIST KNEE & BACKREST**

Lift-assist gas springs help support a patient's body weight for more comfortable and secure table adjustments. Patients can enjoy smoother table transitions with minimal disruption to treatment flow.



**MANICURE ARMRESTS**

Manicure armrests allow seated clients to relax completely. They can be entirely removed or flipped out of the way when clients need to get on and off the table or if increased practitioner access is necessary.



**OPTIONAL REMOVABLE HEAD CRADLE**

Adjustable in both height and angle, the head cradle locks with a maintenance-free single lever system (no need for routine tightening). Perfect for massage treatments.



**REMOVABLE BACKREST EXTENSION**

The backrest extension provides additional support and comfort for taller clients. It is removable and interchangeable with the head cradle accessory.



**OPTIONAL COMFORT CUSHIONING**

Choose from three optional Dunlop® cushioning systems. Luxura is our most luxurious option with premium Enduro® and Viscoflex® memory foam. Alternatively, choose Enduro® foam for support or Comfort foam for an extra thick upholstered look.




**OPTIONAL FOLD-AWAY ARMREST**

Our superior sturdy armrest neatly stows away when not in use. This optional extra is perfect for massage treatments.

**KEY OPTIONS**

	STANDARD	OPTIONAL
<b>DUNLOP CUSHIONING</b>	55mm, medium finish	Enduro (70mm, firm finish) Luxura (80mm, luxurious finish) Comfort (90mm, medium finish)
<b>BACKREST EXTENSION</b>	N/A	Optional
<b>FOLD-AWAY ARMREST</b>	N/A	Optional
<b>MANICURE ARMRESTS</b>	N/A	Optional
<b>BASE STYLE</b>	Concealed in-line wheels	75mm locking castors
<b>FOOTSWITCH</b>	Single	One on each side of the table
<b>TABLE WIDTH</b>	680mm	730mm

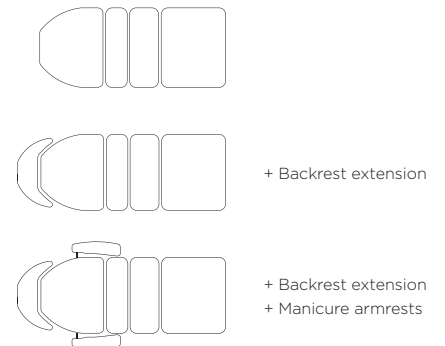

**KEY SPECIFICATIONS**

<b>ADJUSTMENTS</b>	Lift-assist gas spring backrest: +75° Lift-assist gas spring knee lift: +26° Manual backrest extension: +150mm Manual manicure armrest: lift away +110°
<b>SAFE WORKING LOAD</b>	220kg
<b>MOTOR</b>	Lift force: 10,000N Speed: 37mm/sec Height adjustment (min to max): 487mm in 13 seconds Speed test load: 180kg
<b>FOOTSWITCH</b>	Ergonomic low profile design (20mm) Stainless steel Pneumatic control
<b>SHIPPING</b>	1930 x 730 x 720mm 125kg
<b>WARRANTY</b>	Structural: 15 years Hardware: 5 years Motor: 3 years Footswitch: 1 year Upholstery: To arrive in perfect condition

